


DEACTIVATE FREEZE ALARM


To deactivate the freeze alarm on the RAR381/681 and the RMR382/682, you will need to set the remote sensor to Channel 2 or 3. The freeze alarm does not work on channel 2 or 3.

- 1) Remove the cover from the remote sensor and locate the channel switch (see item 6 on the figure below).
- 2) Slide the channel switch to channel 2 or 3.
- 3) Depress the reset button with a paperclip or pen (see item 5 on the figure below).
- 4) Slide the battery cover back on.

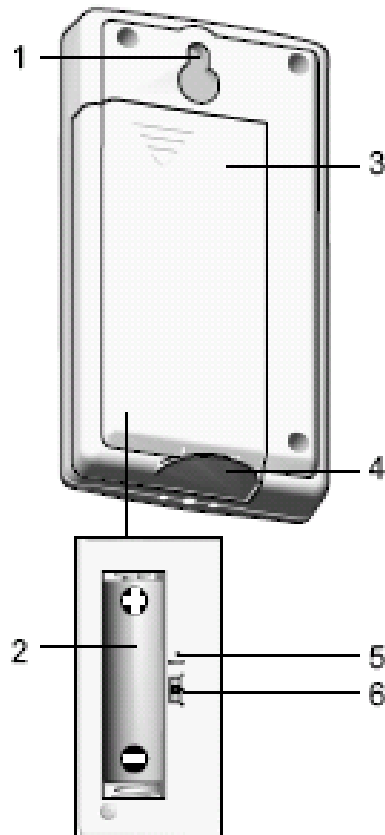


- 5) On the main unit remove the battery cover and locate the reset button. For the RMR382, see item 7 and for the RAR381, see item 8 below.
- 6) Allow 10 minutes for the main unit to search and find the sensor on channel 2 or 3

RMR382/682

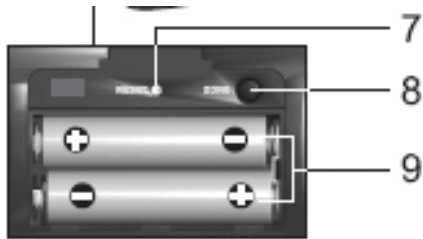

RAR381/382

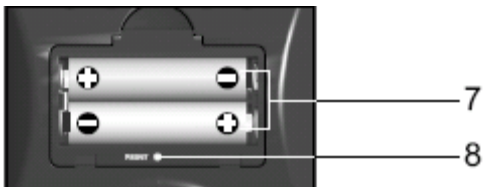

- 7) Please change the channel button (item 3 in the figure below) on the main unit to selected channel on the remote sensor.

